




30" ELECTRIC SLIDE-IN SELF-CLEAN RANGE

MODELS:

WEE510SAGS0 (Stainless)


COOKTOP PARTS

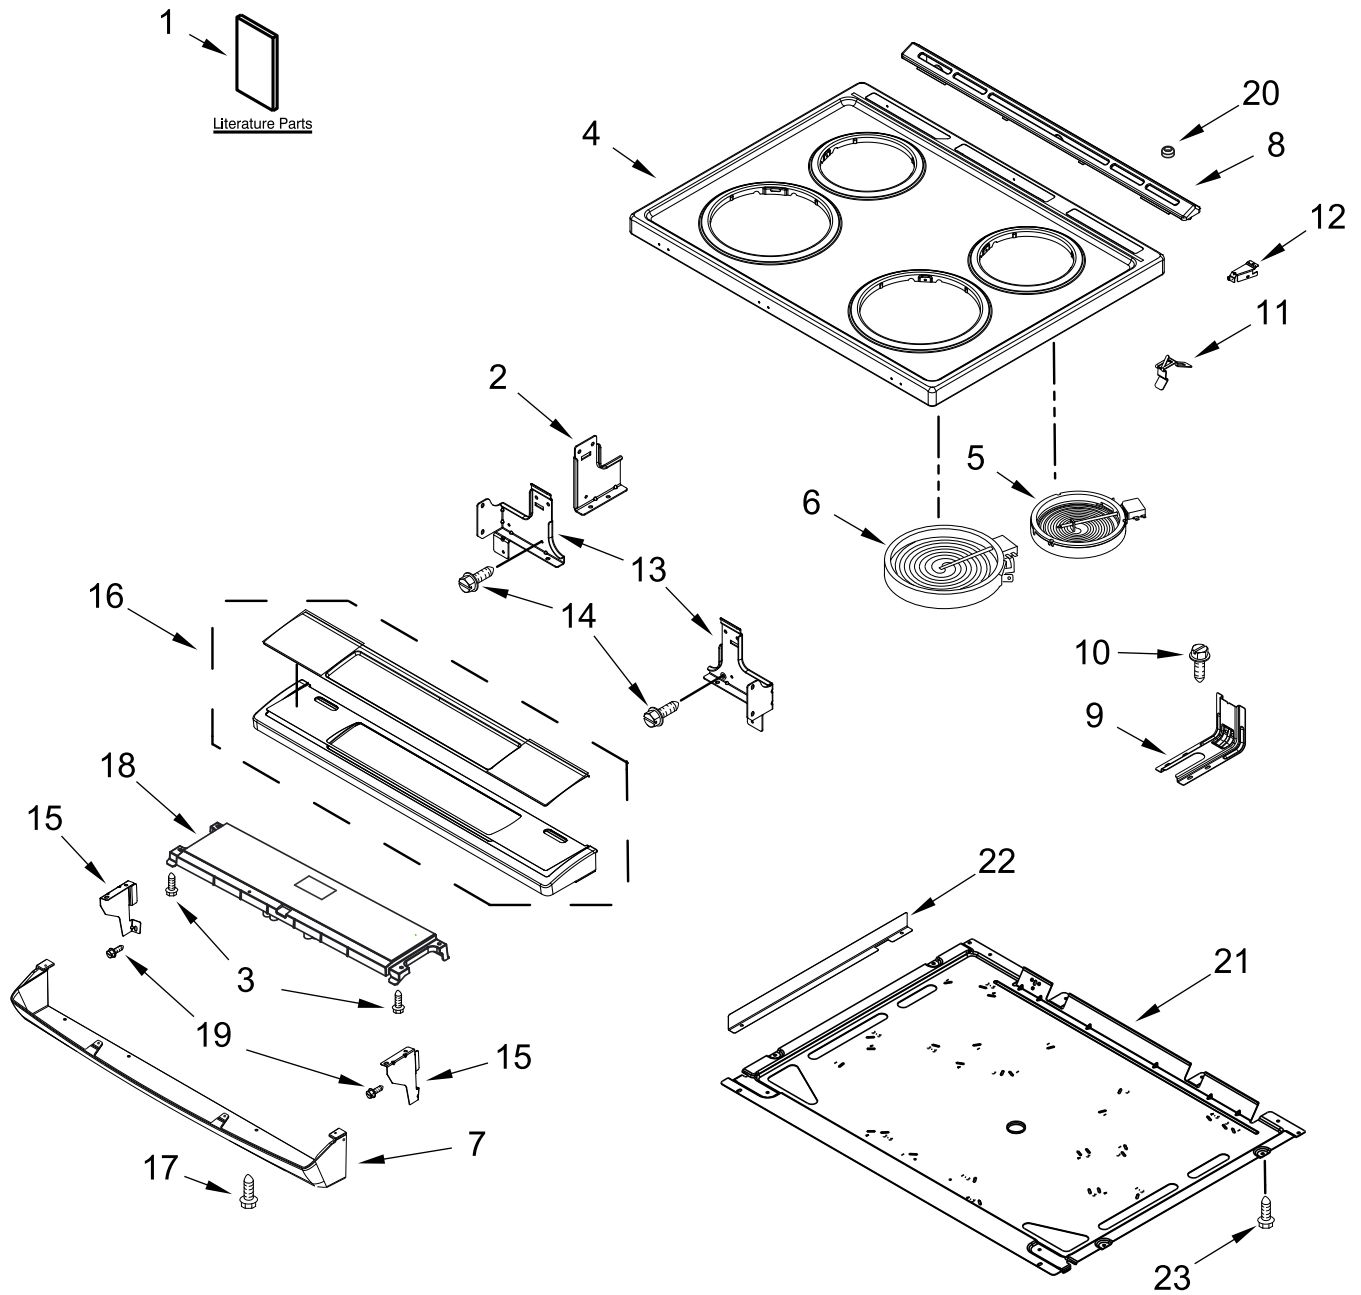

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Vent, Trim Top	18	W10806890	Electronic, Control (LCX)
	W11103604	Use and Care Guide		W10636528	Black	19	3196178	Screw
	W11097823	Instructions, Installation	9	W10606241	Bracket, Anti-Tip	20	W10854253	Bumper
	W10842033	Tech Sheet	10	7101P485-60	Screw, Anti-Tip Kit	21	W10536275	Pan, Radiant
	W10842029	Wiring Diagram	11	W10225448	Spring, Element	22	W10613286	Bracket, Radiant
2	W10814305	Bracket, Console (Center)	12	W10162253	Brace, Corner (Left)	23	3196173	Screw
3	9780274	Screw		W10162252	Brace, Corner (Right)	FOLLOWING PARTS NOT ILLUSTRATED		
4		Cooktop	13	W10814304	Support, Cooktop (Right)			
	W10825867	Black		W10814303	Support, Cooktop (Left)	W10800457		Harness, Main
5	8273994	Element (1200W) (Left Front and Right Rear)				W10664316		Clip, Harness
6	W10275048	Element (3000/1400W) (Right Front and Left Rear)	14	3196169	Screw	W10800463		Harness, Cooktop
			15	W10547960	Bracket, Console (Left)	313438		Clip, Harness
				W10547961	Bracket, Console (Right)	7111P017-60		Clamp, Wire
7		Panel, Front	16		Console	W10800459		Harness, Console
	W10816943	Black		W10825357	Stainless			
			17	W10516115	Screw			


CHASSIS PARTS

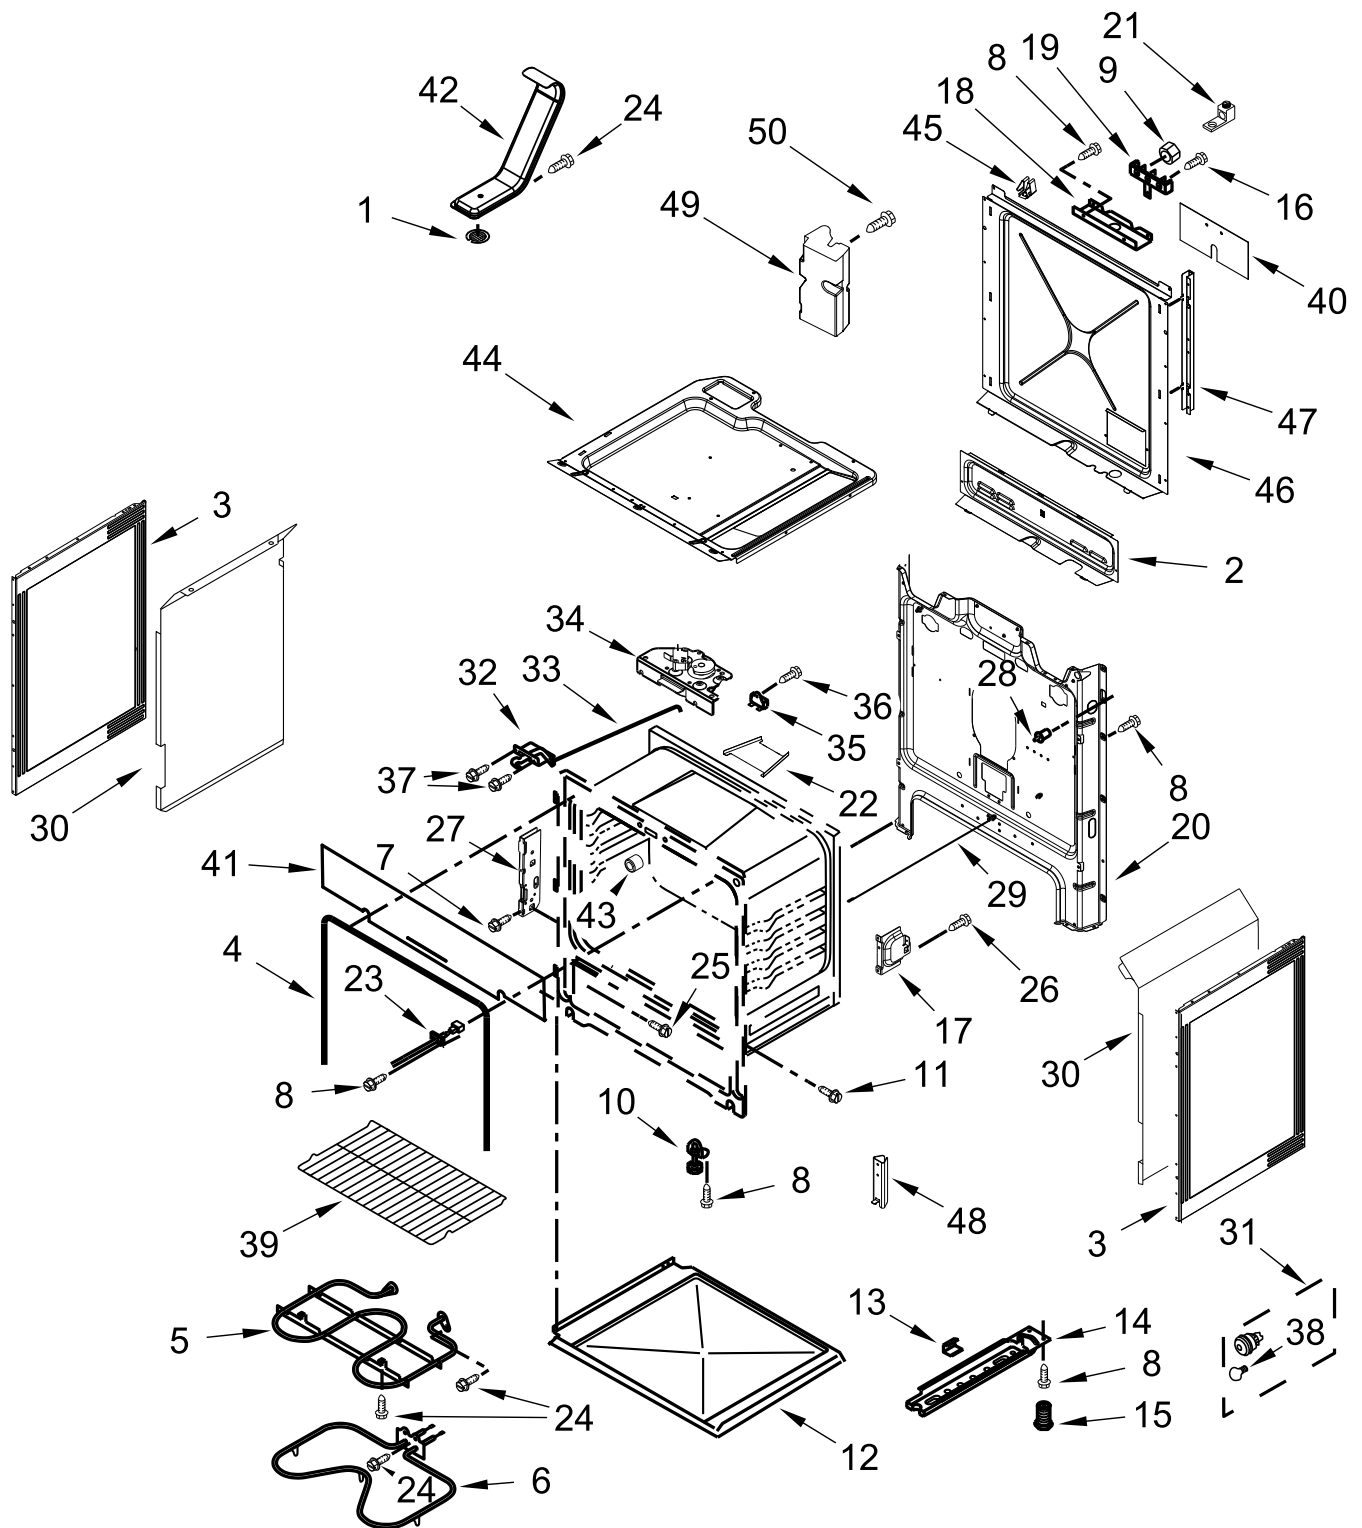

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9761301	Screen, Vent	19	W10245259	Block, Terminal	35	3196548	Fuse, Thermal
2	W10162248	Cover, Wire	20		Back, Main (Not Serviced)	36	3196172	Screw
3		Panel, Side	21	W10281322	Kit, Bare Wire Adapter Block	37	3196560	Screw
	W10162245	Black	22	W10853401	Baffle, Upper Chassis	38	311255	Bulb, Oven Light
4	W10658354	Seal, Door	23	W10586204	Sensor	39	W10268578	Rack, Oven
5	W10583047	Element, Broil	24	W10362924	Screw	40	W10655441	Shield, Power Cord
6	W10535148	Bake, Element	25	3400080	Screw	41	W10848443	Chassis, Upper Insulation
7	W10031780	Screw	26	3196169	Screw	42	W10824557	Assembly, Flue
8	3196178	Screw	27	W10289077	Receiver, Hinge	43	9758701	Spacer, Door
9	3400029	Nut	28	W10627802	Switch, Door	44	W10814301	Chassis, Support Upper
10	W10341186	Assembly, Front Foot	29	9757239	Rod, Door Switch	45	W10866583	Panel, Clip
11	W10067840	Screw	30	9761448	Retainer, Insulation (Right)	46	W10289172	Cover, Back
12	W10312471	Tray, Insulation		9761449	Retainer, Insulation (Left)	47	W10162241	Channel, Rear
13	W10137382	Clip, Panel	31	W10454648	Assembly, Light	48	W11181076	Bracket, Reinforcing
14	W10390007	Assembly, Base Rail (Right)	32	9761013	Assembly, Door Latch (Front)	49	W10914589	Counterweight
	W10390008	Assembly, Base Rail (Left)	33	W10078370	Rod, Push Latch	50	W11034869	Screw
15	W10058460	Foot, Leveling	34	W10107820	Assembly, Door Latch (Rear)			FOLLOWING PARTS NOT ILLUSTRATED
16	W10327235	Screw				W10830993		Insulation, Wrap
17	W10355173	Bracket, Oven Support				W10815385		Insulation, Back
18	3186034	Bracket, Service						

DOOR PARTS

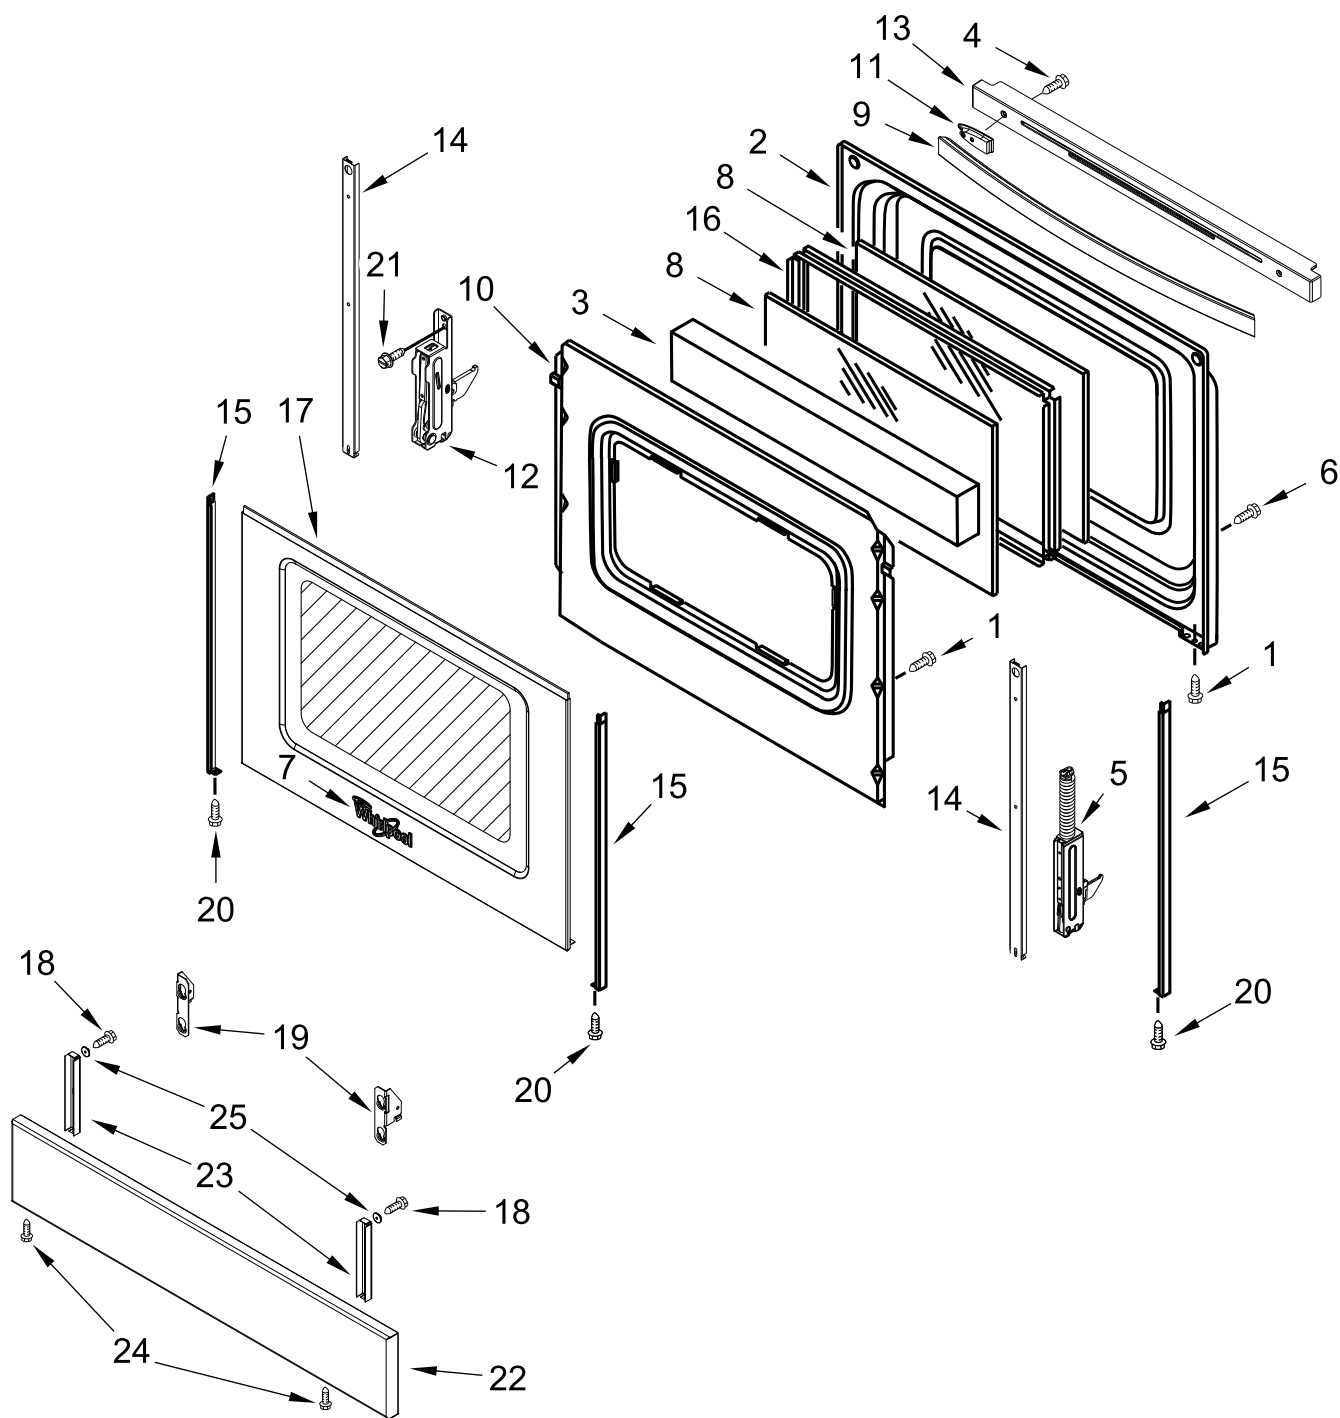

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	12	W10440013	Hinge, Door (Active)	19	W11096901	Mounting Bracket, Toe Panel (Left)
2	9761344	Liner, Door	13		Trim, Oven Door Vent		W11096902	Mounting Bracket, Toe Panel (Right)
3	W10278991	Insulation, Door Strip		W10310922	Black	20	W10327235	Screw
4	W10465158	Screw	14	W10544179	Strap, Door	21	W10031780	Screw
5	W10388635	Hinge, Door (Active)	15		Trim, Door	22		Panel, Toe
6	W10200660	Screw		W10746436	Black (Left)		W11037794	Stainless
7	W10884775	Nameplate		W10746435	Black (Right)	23	W11039147	Bracket, Toe Panel
8	9758162	Glass, Inner	16	W10316950	Frame, Glass	24	3196169	Screw
9		Handle, Oven Door	17		Glass Assembly, Outer Door	25	8004P024-60	Spacer, Side Panel
	W10618239	Stainless		W11169624	Stainless			
10	9761357	Retainer, Insulation	18	W10673879	Screw			
11		Standoff, Handle						
	W10410341	Black						

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31617A	Cleaner, Grate & Drip Pan
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting